


1

REMIDEMI XL EVO 1 - FAMILY KIT INSTALLATION

For Benno® RemiDemi XL EVO 1

READ CAREFULLY BEFORE INSTALLATION AND USAGE. TO BE INSTALLED BY MECHANIC AT AUTHORIZED BENNO DEALER.

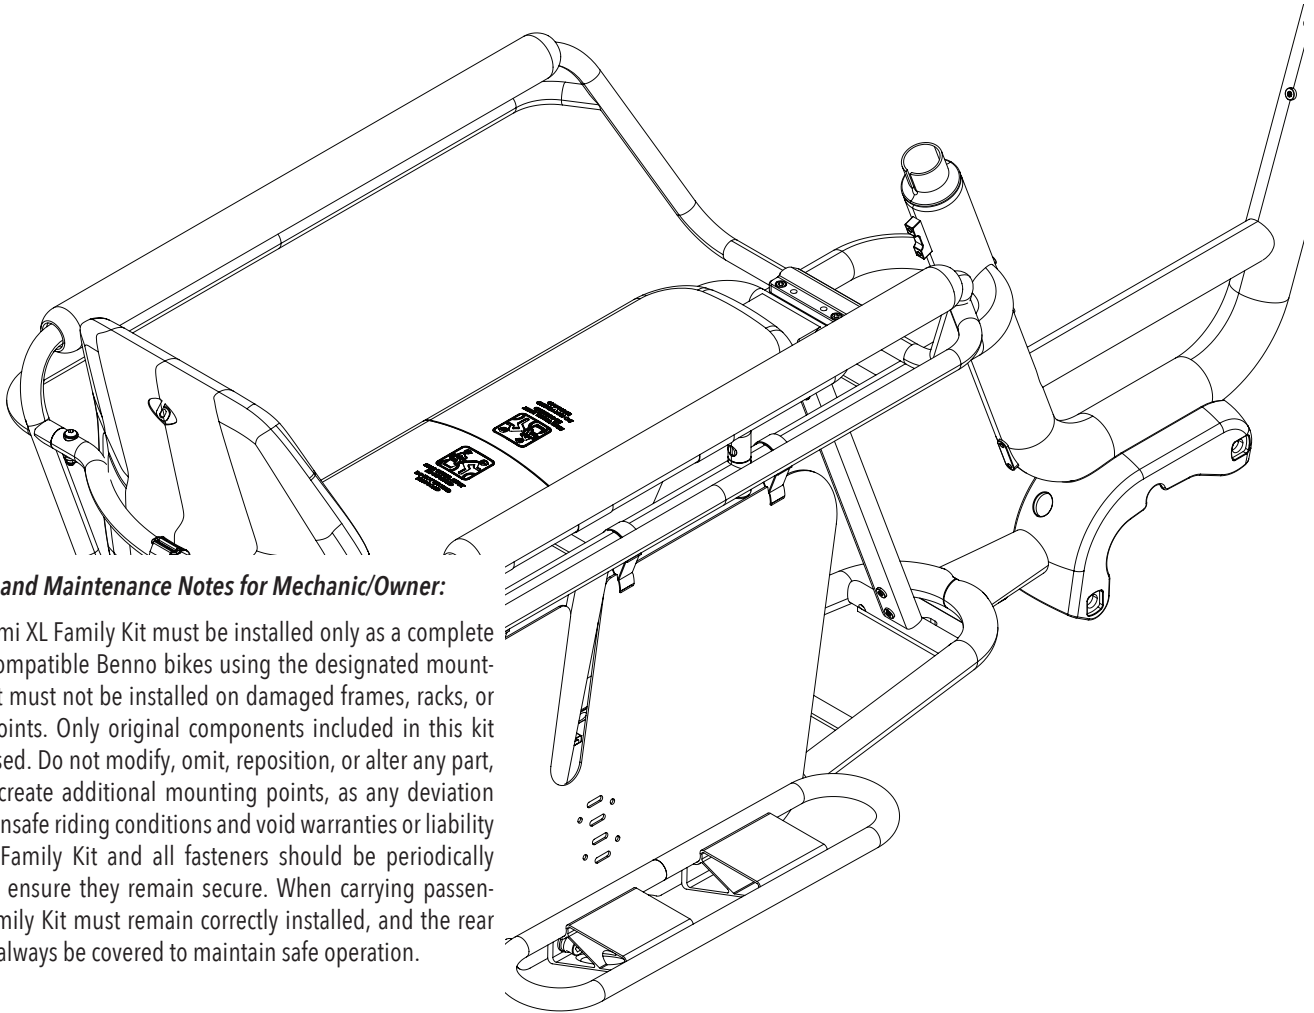

Installation and Maintenance Notes for Mechanic/Owner:

The RemiDemi XL Family Kit must be installed only as a complete system on compatible Benno bikes using the designated mounting points. It must not be installed on damaged frames, racks, or mounting points. Only original components included in this kit should be used. Do not modify, omit, reposition, or alter any part, and do not create additional mounting points, as any deviation may create unsafe riding conditions and void warranties or liability claims. The Family Kit and all fasteners should be periodically inspected to ensure they remain secure. When carrying passengers, the Family Kit must remain correctly installed, and the rear wheel must always be covered to maintain safe operation.

WARNING!

REAR WHEEL MUST BE COVERED!

**INSTALL COMPLETE FAMILY KIT
BEFORE CARRYING PASSENGERS!**

**FAILURE TO COMPLY MAY RESULT
IN SERIOUS INJURY OR DEATH!**



**MUST INSTALL
COMPLETE FAMILY KIT**

WHEEL GUARDS *or*
REMIDEMI XL PANNIER BAGS,
HIGH RAIL PLUS, RACK PADS,
SIDELOADER AND BACKREST




WARNING: THIS FAMILY KIT MUST BE PROPERLY INSTALLED AND USED AS A COMPLETE SET FOR PASSENGER USE. THE REAR WHEEL MUST BE FULLY COVERED WITH THE INCLUDED BENNO WHEEL GUARDS OR REMIDEMI XL PANNIER BAGS (SOLD SEPARATELY). PASSENGERS MUST WEAR A HELMET, CLOSED SHOES, AND BE PHYSICALLY ABLE TO REMAIN SECURELY ON THE BIKE AT ALL TIMES. WHEN USING THIRD-PARTY CHILD SEATS (NOT INCLUDED), REMOVE RACK PADS AND THE PASSENGER BACKREST AS NEEDED, AND USE WHEEL GUARDS ONLY—PANNIER BAGS MUST NOT BE USED. A BENNO DUAL KICKSTAND IS REQUIRED FOR PASSENGER USE (SOLD SEPARATELY). BENNO HIGH RAILS ARE FOR STABILIZATION ONLY AND DO NOT PROVIDE ACCIDENT PROTECTION. DO NOT EXCEED WEIGHT LIMITS: SIDELOADERS 55 LB / 25 KG PER SIDE; COMBINED RACK LOAD 130 LB / 60 KG. DO NOT STAND ON SIDELOADERS.

FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN SERIOUS INJURY OR DEATH AND MAY VOID WARRANTIES OR LIABILITY CLAIMS. IMPORTANT: READ THE COMPLETE OPERATING INSTRUCTIONS AT BENNOBIKES.COM/WARNING BEFORE USE.

2

REMIDEMI XL EVO 1 - FAMILY KIT - PARTS INCLUDED





For Benno® RemiDemi XL EVO 1

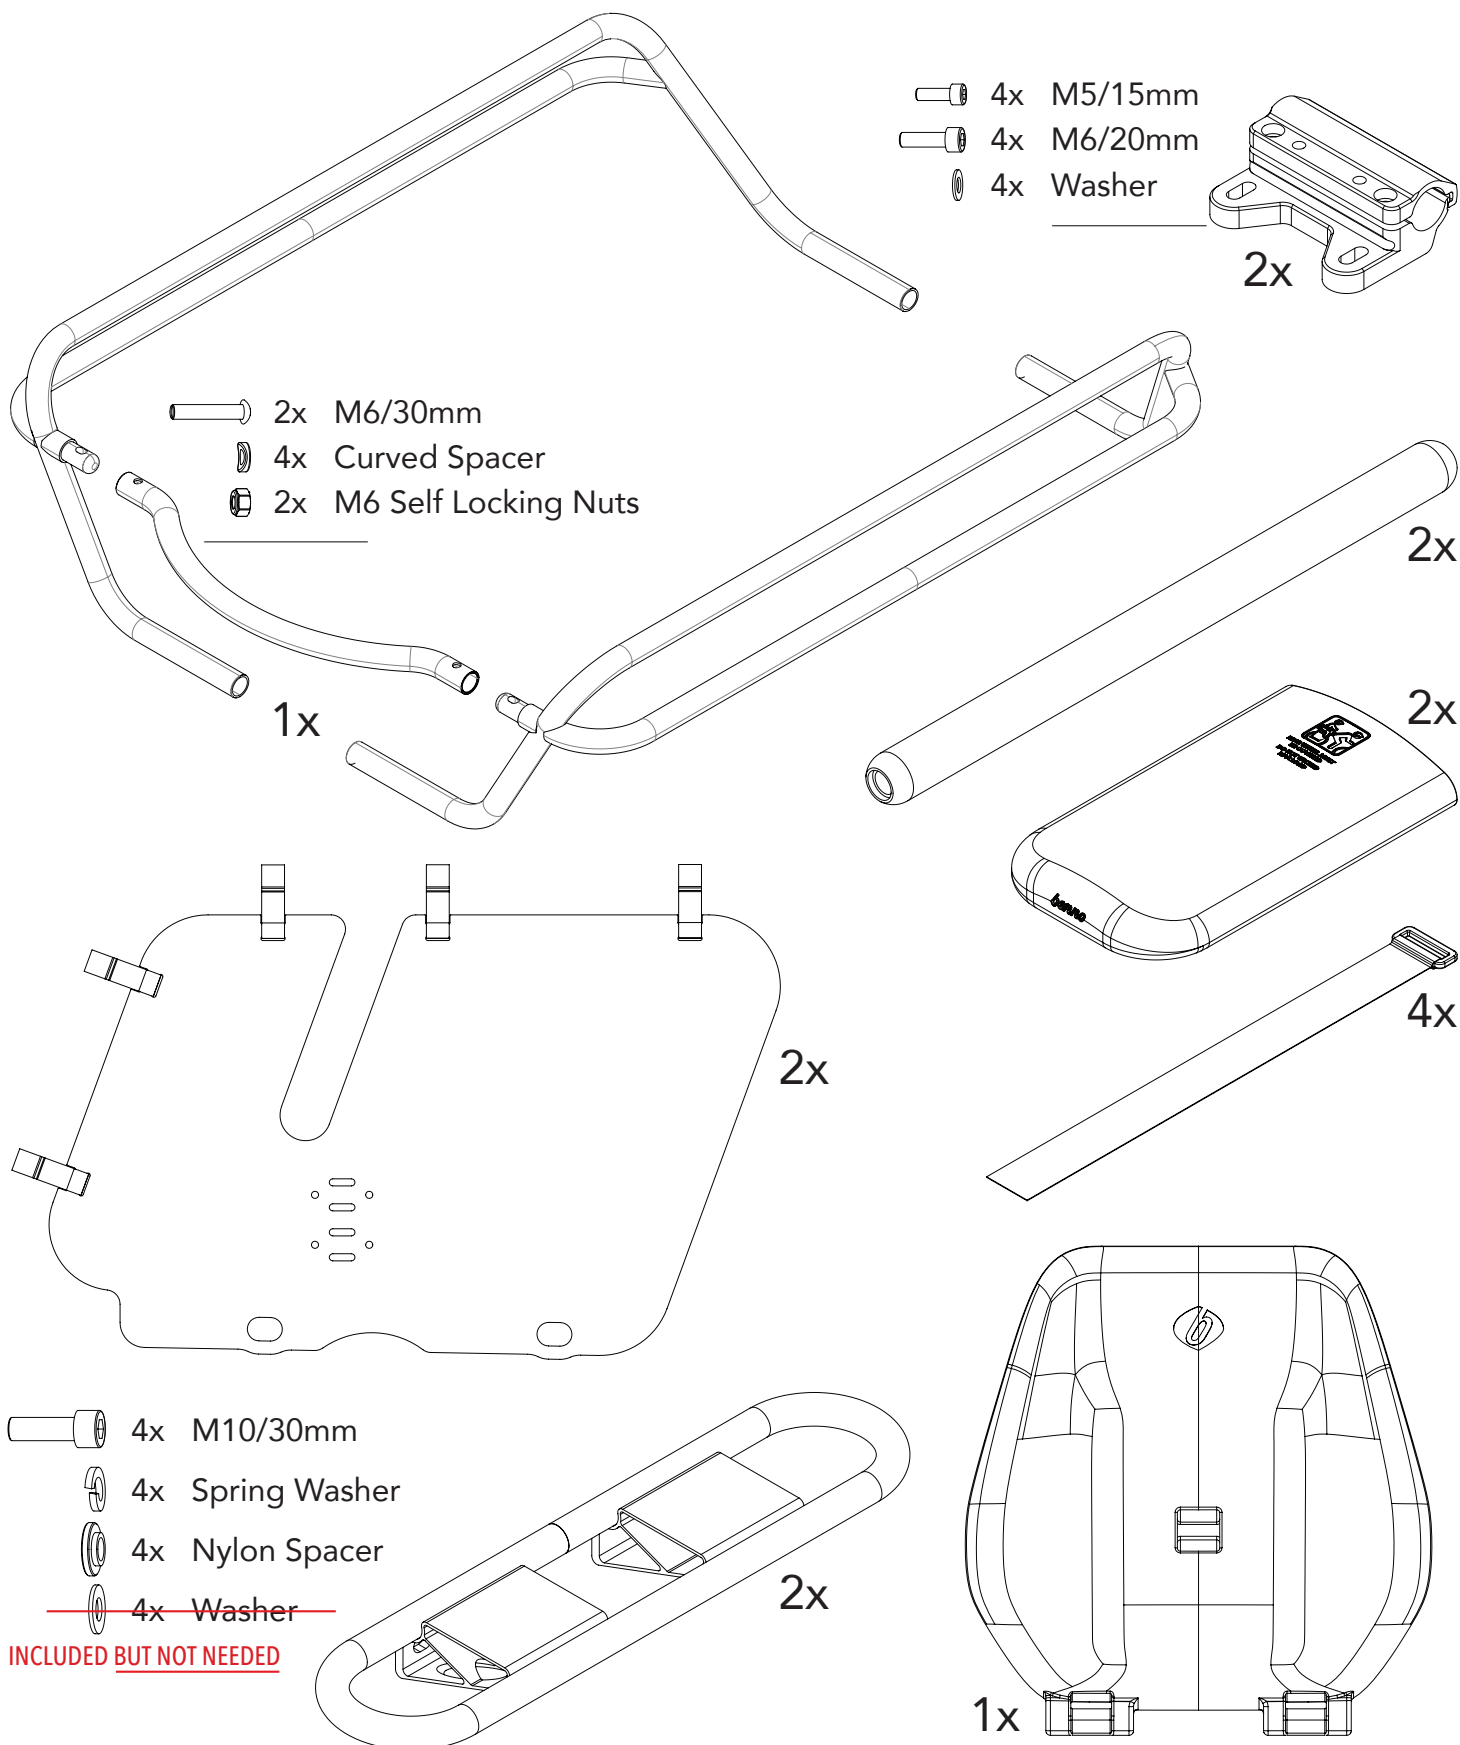

3

WHEEL GUARD / SIDELOADER INSTALLATION

For Benno® RemiDemi XL EVO 1

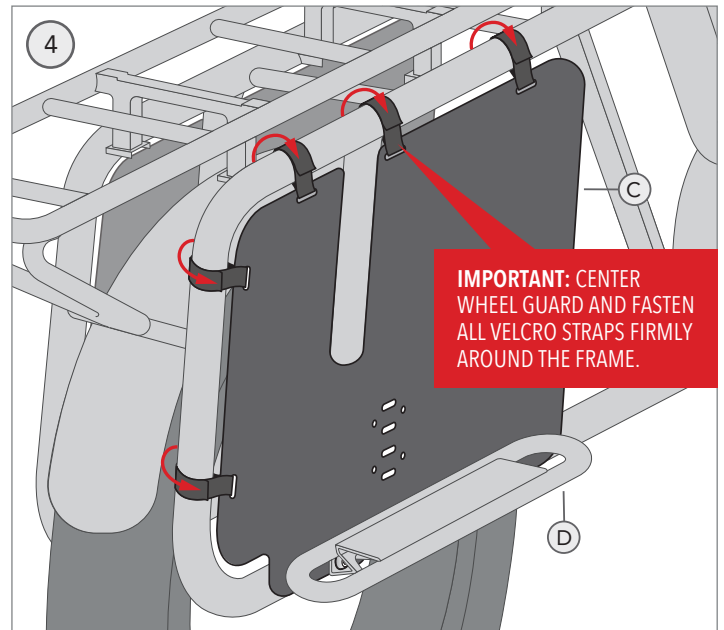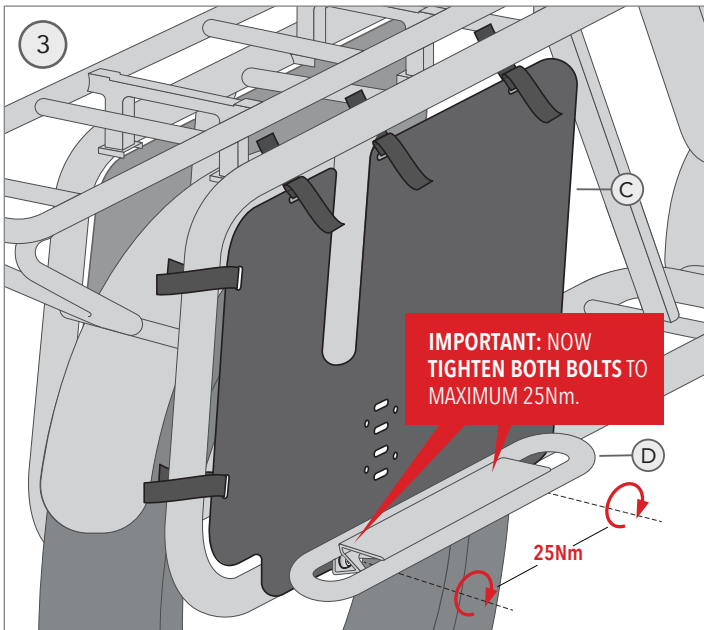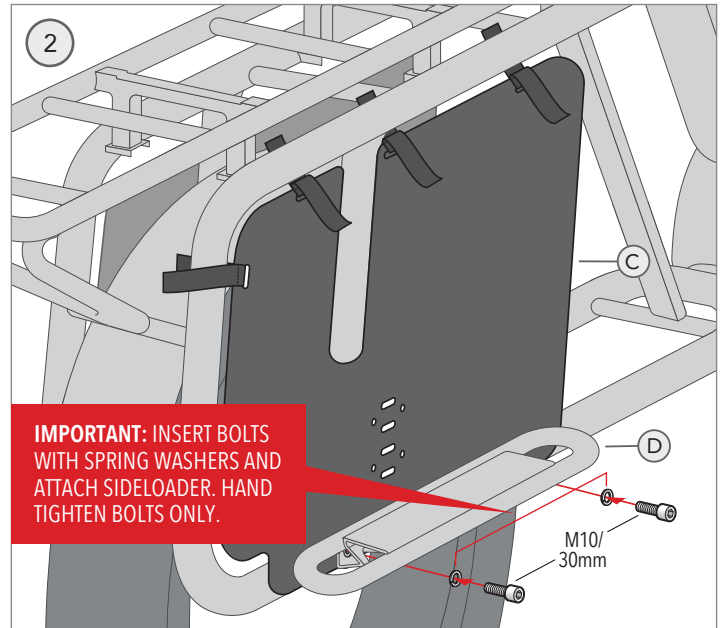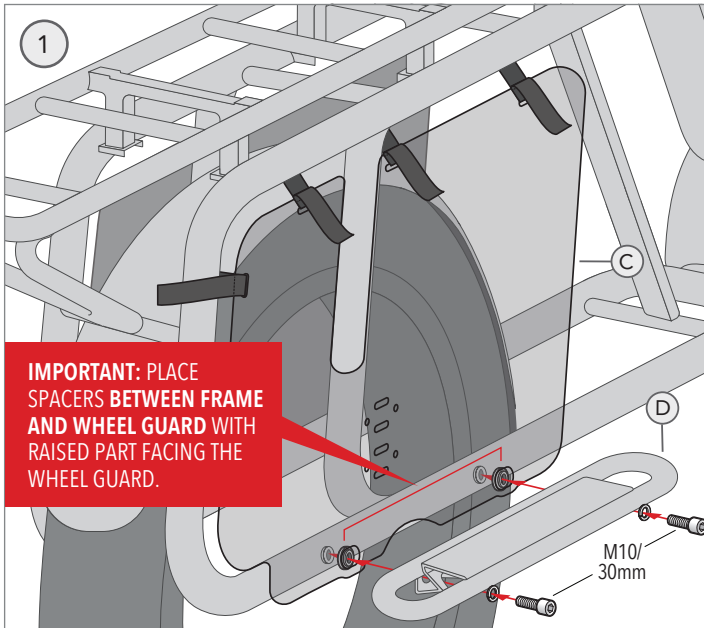

Step 1: IMPORTANT: INSTALL REMIDEMI XL WHEEL GUARDS (C) ON BOTH SIDES TO COVER THE REAR WHEEL. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY. Remove the two rubber plugs on the lower tube (chainstay) of the frame. Place both nylon spacers **between the frame and wheel guard** with the raised side facing the wheel guard. Insert both **M10/30mm** bolts through the spring washers, side loader (D), wheel guard (C), and nylon spacers into the frame as shown in illustrations 1-4. Adjust the side loader and the wheel guard and hand-tighten both bolts.





Then **tighten both bolts securely** to maximum **25Nm**. Now fasten all Velcro straps firmly around the frame as shown in 4.

NOW REPEAT SAME STEPS TO INSTALL LEFT/ OTHER SIDE (NOT SHOWN).

4

RACK PAD INSTALLATION

For Benno® RemiDemi XL EVO 1

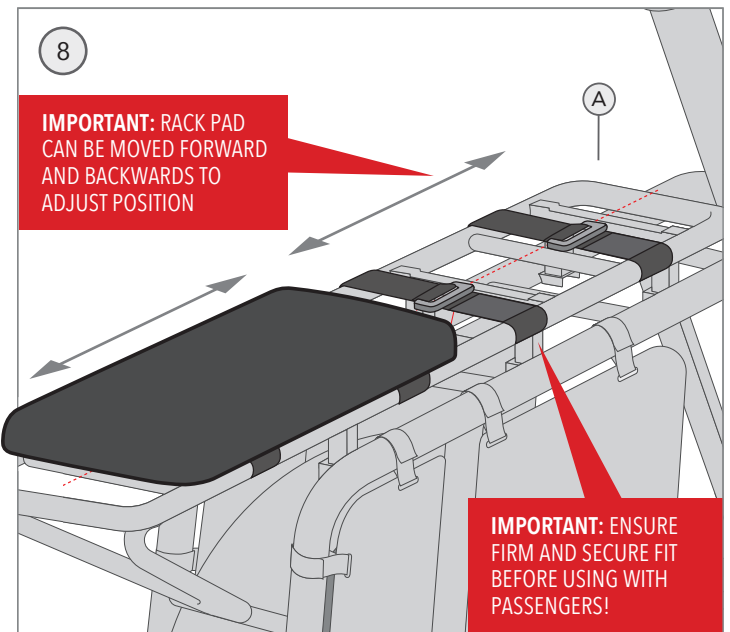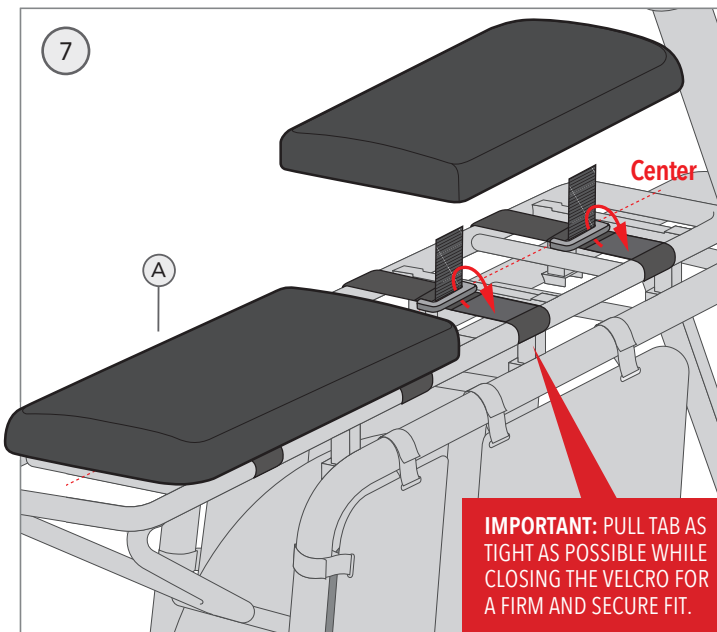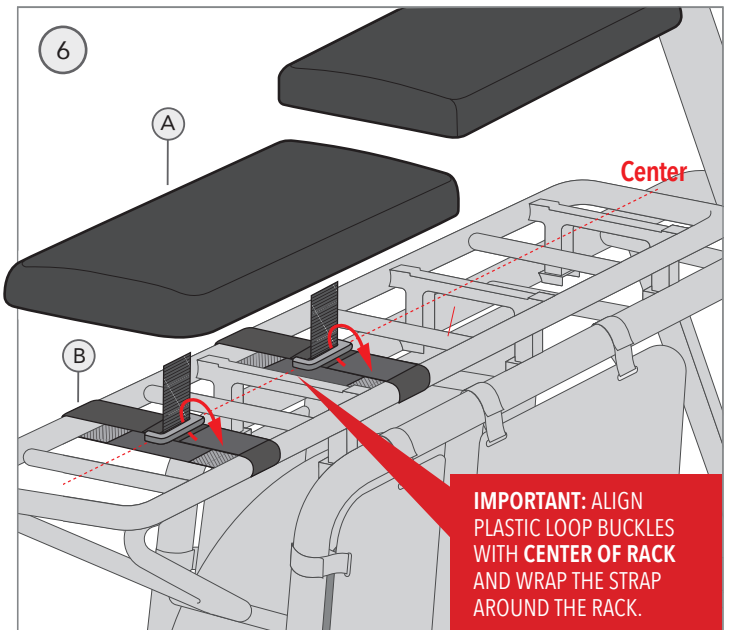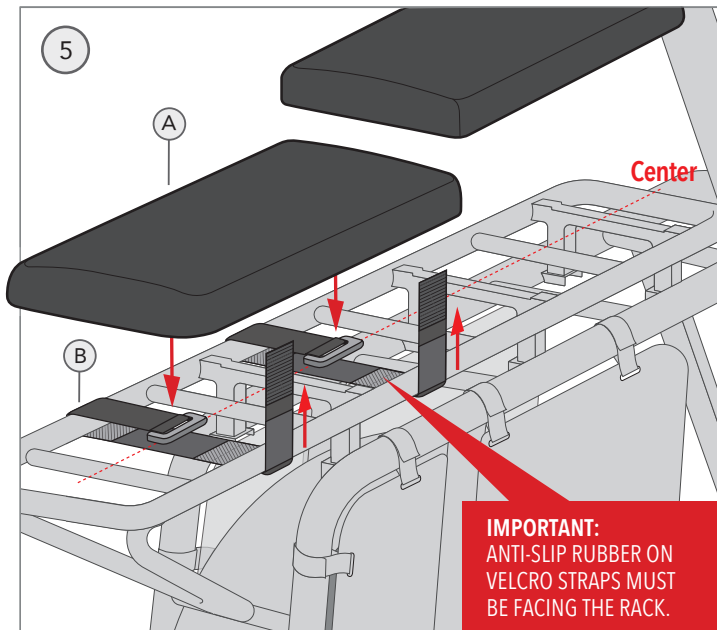

Step 2: Install Velcro straps (B) around rear rack as shown on illustrations (5-6). **IMPORTANT: ALIGN PLASTIC LOOP BUCKLES WITH CENTER OF RACK AND WRAP THE STRAP AROUND THE RACK.** Pull tabs as tight as possible while closing the velcro for a firm and secure fit to prevent the velcro straps and rack pad from sliding.

Step 3: Line up rack pad (A) with velcro straps (B) and push the pad firmly down onto the center of the velcro straps as shown in illustrations (7-8).

5

RAIL CLAMPS PRO / HIGH RAIL PLUS INSTALLATION

For Benno® RemiDemi XL EVO 1

1. Place the bottom half of the clamp on each end of the rack (front and rear). Insert them from below and align with the two mounting holes underneath.

2. Secure clamps by inserting two M6 bolts and washers per clamp into the mounting holes underneath the rack. **Hand-tighten the bolts enough to hold the clamps in place, but leave them loose for adjustments.**


3. Connect the two long side rails (A) by attaching the curved rear rail (B) using the M6 bolts, curved spacers, and nuts as shown. Then, tighten the nuts and bolts securely.

4. Place the assembled rail onto the lower half of the open rail clamps on both ends.

5. Close both rail clamps by hooking the top half of each clamp into the outer channel of the lower rail clamp. Press top half down to close clamp, as shown in (C).

6. Insert two M5 bolts from the top into both clamps and tighten them to a torque of 5Nm to secure the rails in the clamps.

7. Adjust the rail/clamp position as needed, then firmly tighten both clamps to the bottom of the rack using the two M6 bolts per clamp, ensuring a torque of 6Nm.

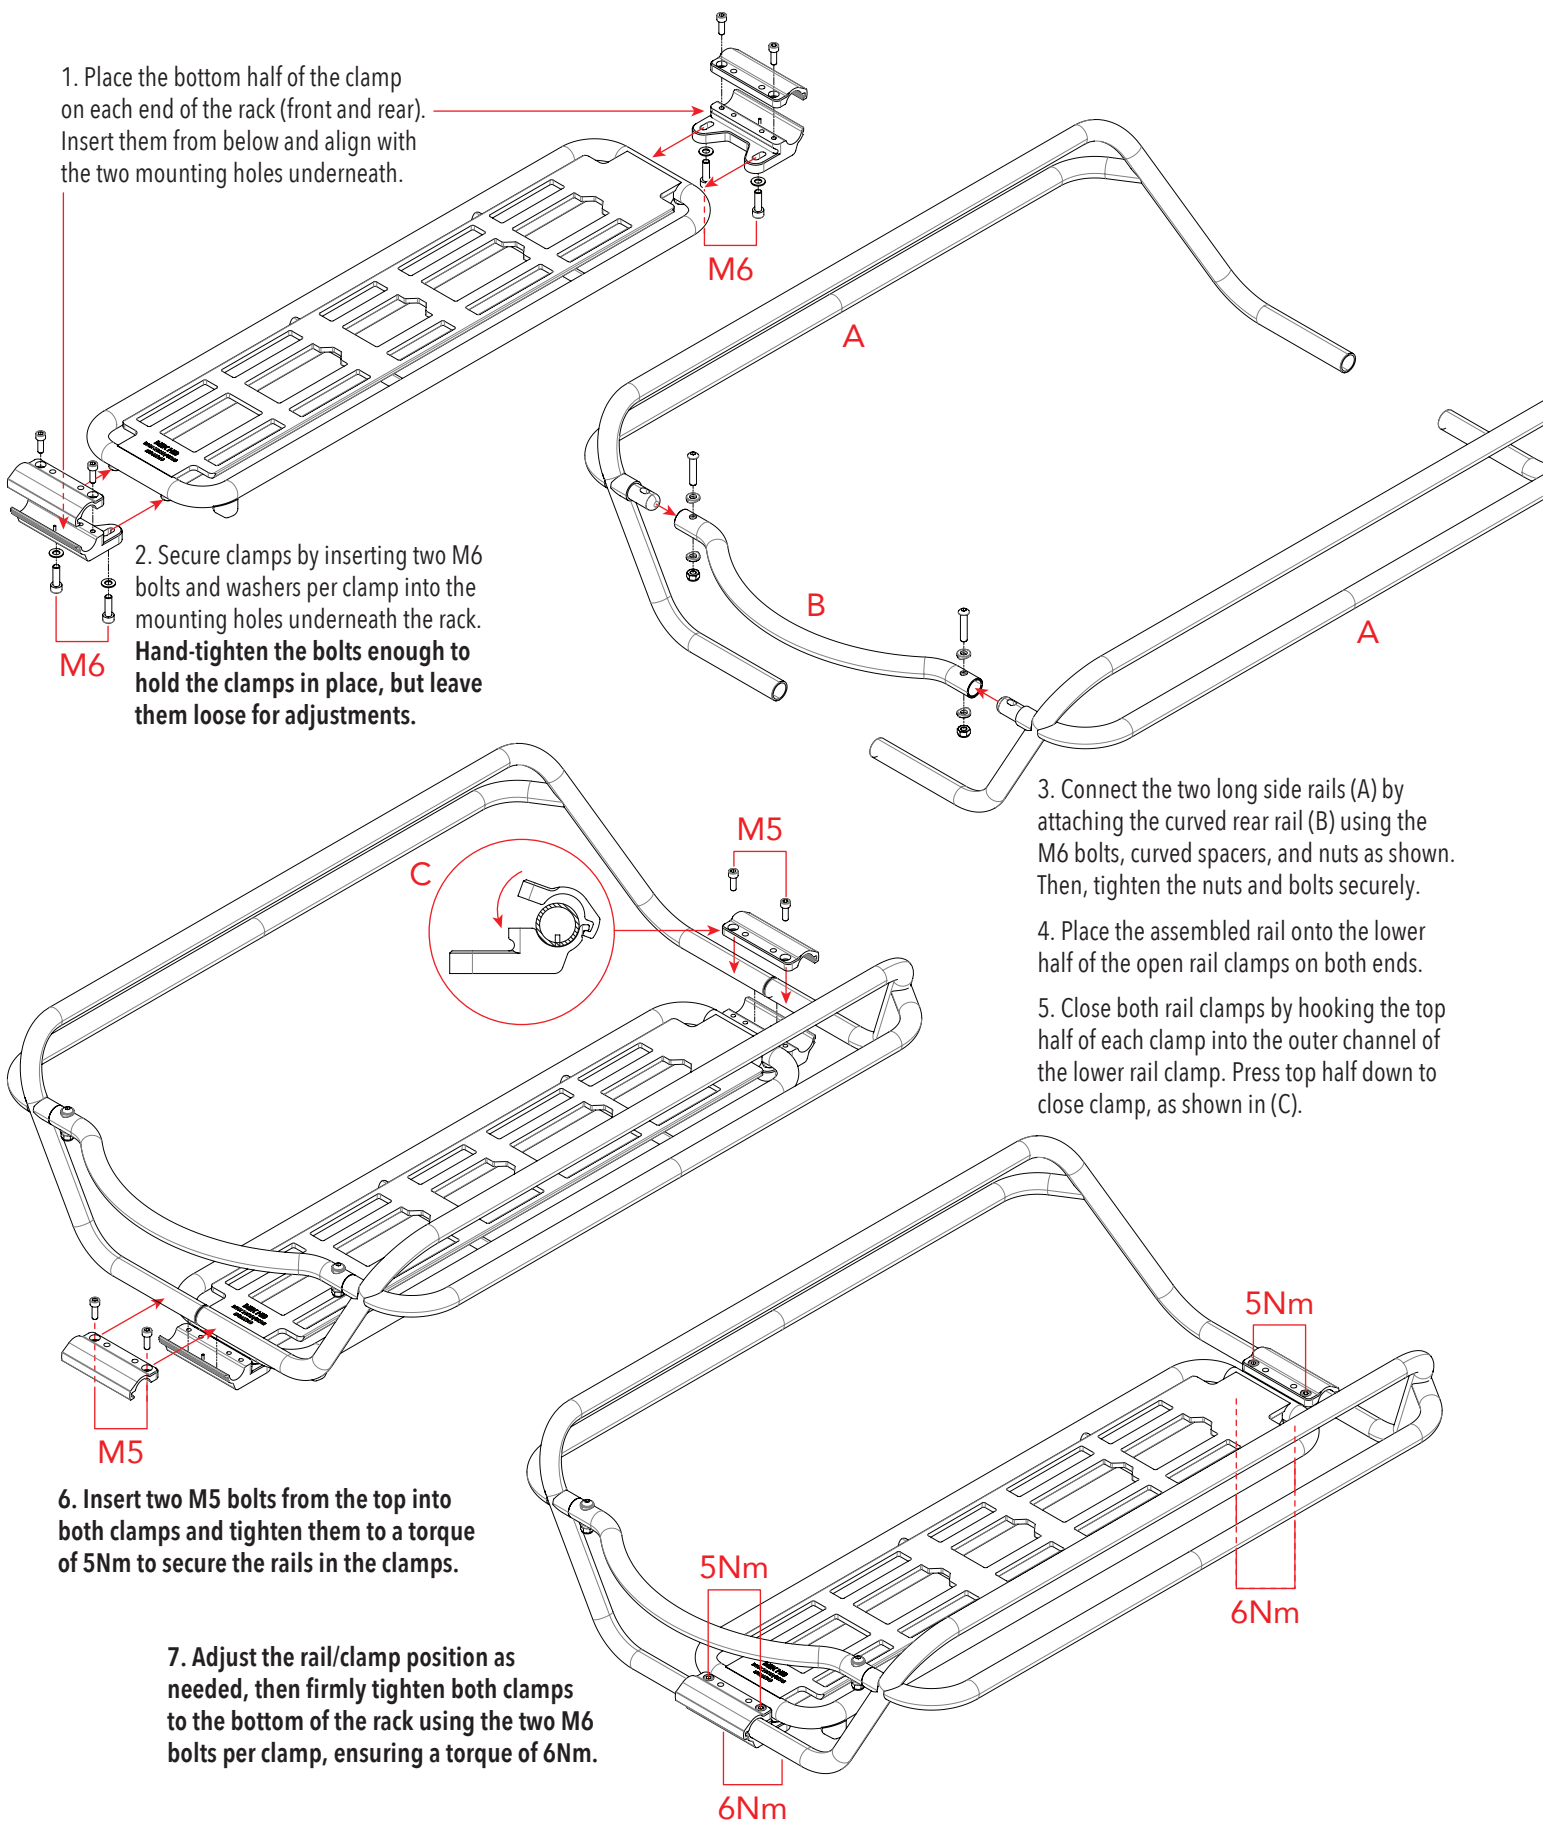


6

PASSENGER BACKREST/RAIL PAD INSTALLATION

For Benno® RemiDemi XL EVO 1

PASSENGER BACKREST

Place the passenger backrest into the rear of the high rail as shown, then wrap the three Velcro straps around the rail, **pulling each as tight as possible to ensure a firm and secure fit.**

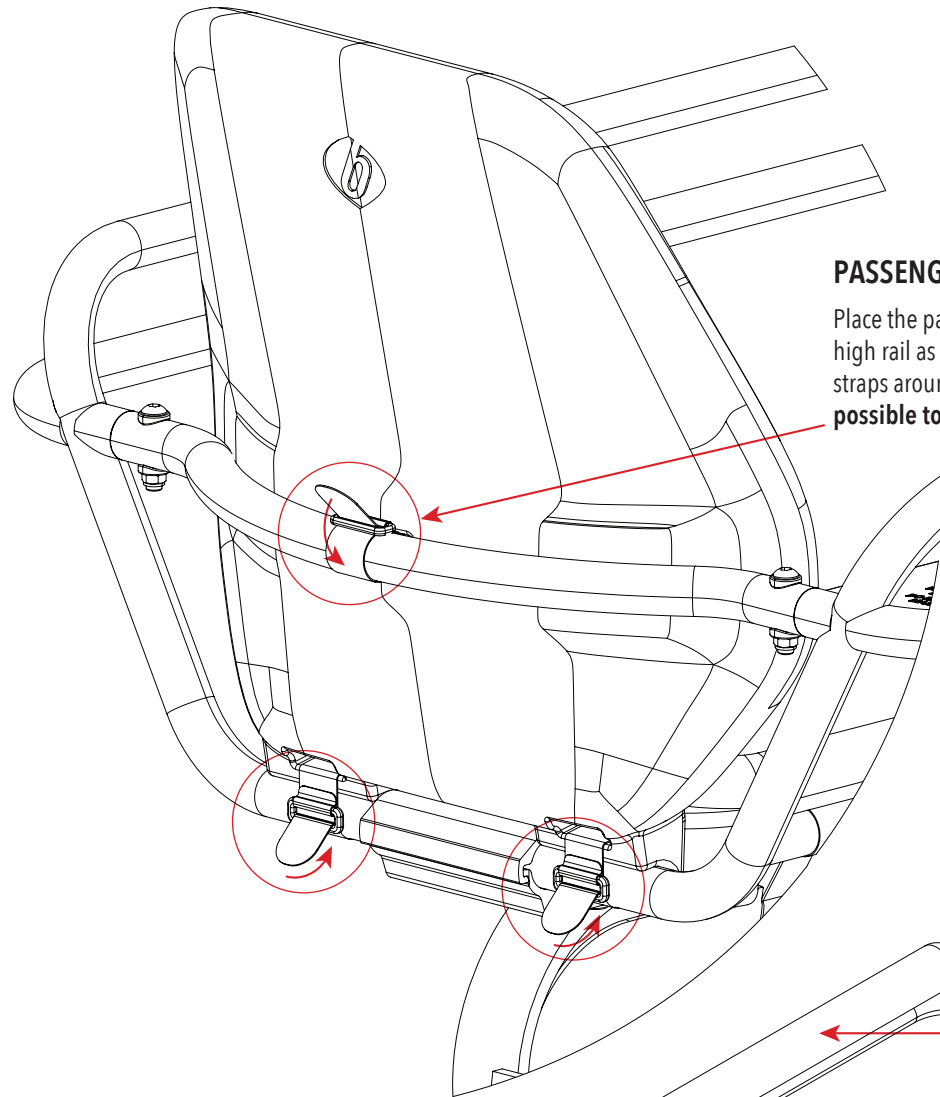

RAIL PADS

Unzip the neoprene cover, place the foam pad over the upper tubes of the high rail, and zip the cover closed to secure; repeat for left and right rail pads.

